

PALLET JACK ASSEMBLY GUIDE




STEP 1

Insert the shaft: Place the shaft with the pre-drilled hole into its designated position.



STEP 2

Thread the chain: Pass the chain through the centre hole of the perforated shaft.

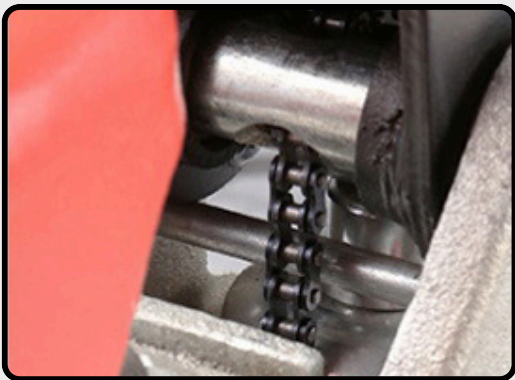


STEP 3

Guide the chain through the pinhole: Continue threading the chain through the pinhole on the shaft.




STEP 4

Secure the chain: Ensure the nut at the end of the chain fits into the notch on the swing arm, holding it in place.

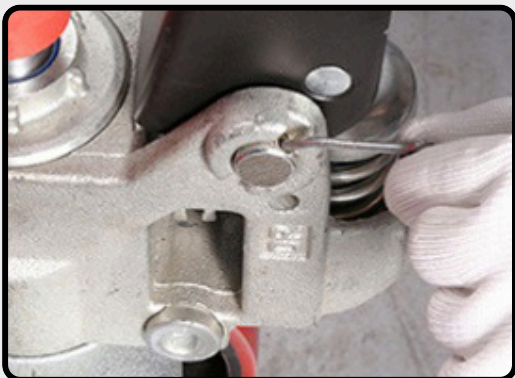

STEP 5

Remove the rod: Pull out the small iron rod holding the spring in position.

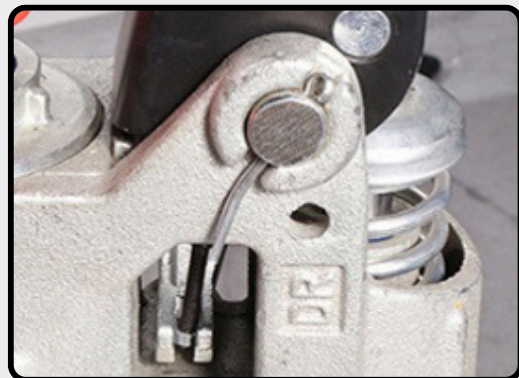

STEP 6

Set the elastic pin: Use a hammer to tap the elastic pin into place securely.